Frigus: temperature and effect diagram

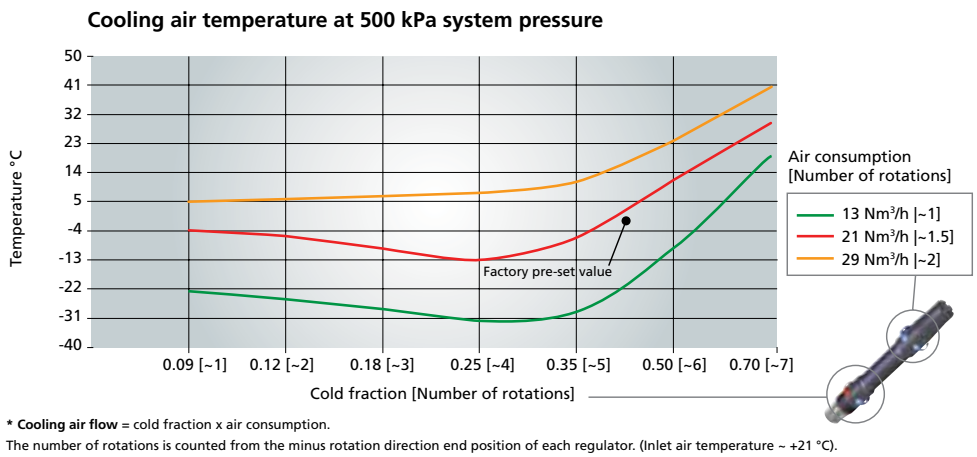

*** Cooling air flow** = cold fraction x air consumption.
The number of rotations is counted from the minus rotation direction end position of each regulator. (Inlet air temperature ~ +21 °C).

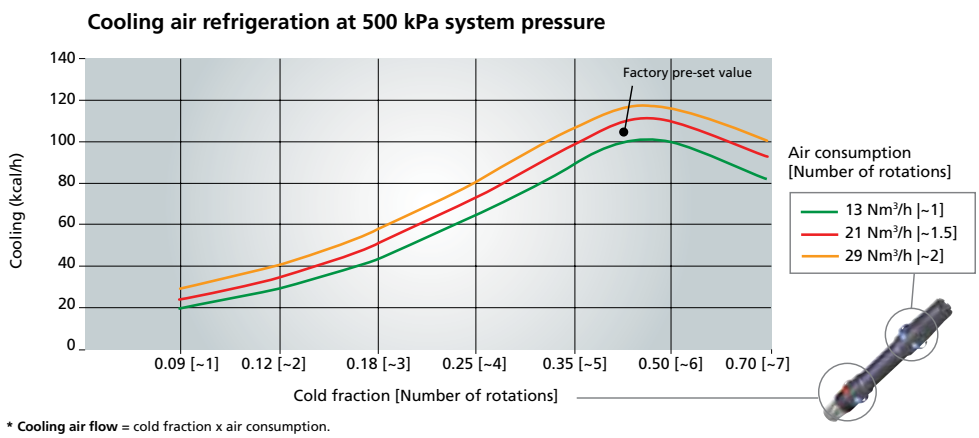

*** Cooling air flow** = cold fraction x air consumption.
The number of rotations is counted from the minus rotation direction end position of each regulator. (Inlet air temperature ~ +21 °C).

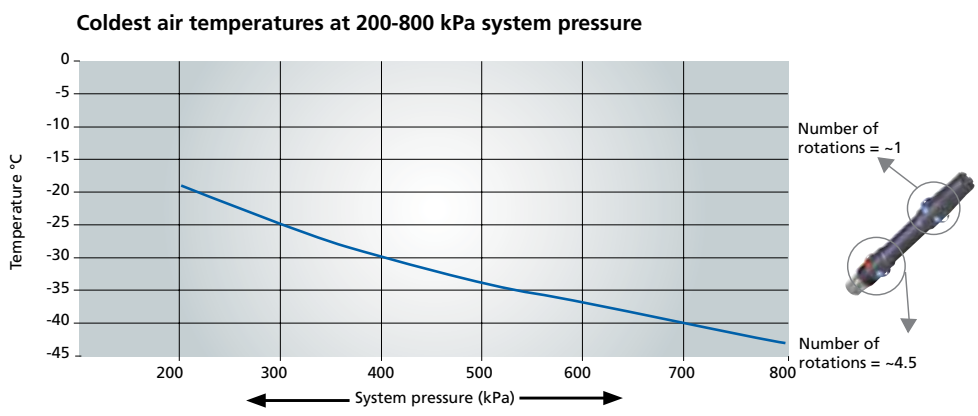

The number of rotations is counted from the minus rotation direction end position of each regulator. (Inlet air temperature ~ +21 °C).